

Navigation system

MEDION® GoPal® P5255, P5455

MEDION®

Manual

Notes on these Operating Instructions

The operating instructions and installation guidelines have been organized so that subject-related information can be easily found using the contents list.

Note

You will find comprehensive Operating Instructions for navigation on relevant CDs/DVDs and at the online help of the device.

The section "Frequently Asked Questions" contains answers to questions that are frequently addressed to our customer service department.

Document Your Navigation Unit

It is important to record the details of your Navigation Unit and the purchase thereof. In the event you require warranty support you may be asked for this information. The serial number can be found on the back of the device:

Serial Number
Password
Information note
SuperPIN
UUID
Date of Purchase
Place of Purchase

Please record the serial number into any appropriate guarantee documents.

You will enter your own password and information note using the Security Function.

The SuperPIN and the UUID will be provided following the activation of the Security Function. See Page 20.

Quality

The components used have been selected to provide a product that has a high level of functionality and is user friendly, safe and reliable. A well-balanced hardware and software design allows us to offer you a technologically advanced navigation system, which is both practical and enjoyable to use.

Service

Our customer care is there to provide support and assistance whenever you have questions or are experiencing problems.

This manual contains a section specific to Customer Service starting on page 41.

Copyright © 2011, version 12/09/2011. All rights reserved. Microsoft®, MS-DOS®, and Windows are registered trademarks of Microsoft Corporation in the U.S. and other countries. Pentium® is a registered trademark of Intel Corporation. The names of actual companies and products mentioned herein may be the trademarks of their respective owners. Information in this document is subject to change without notice.

Contents

- Safety and Maintenance 1**
 - Safety Instructions 1
 - Data Security 1
 - Operating Environment..... 2
 - Repair 2
 - Ambient temperature..... 2
 - Electromagnetic Compatibility 3
 - Connection 3
 - Power supply through Car Adapter..... 3
 - Cabling 3
 - Information about the Regulatory Compliance according to R&TTE..... 4
 - Battery Operation..... 4
 - Maintenance 4
 - Care of the Display 5
 - Recycling and Disposal..... 5
 - Transport 6
- Supplied Items..... 7**
- Views 8**
 - Front Components 8
 - Back Components 9
 - Top Components 9
 - Bottom Components..... 10
- Initial Set up 11**
 - I. Charging the Battery 11
 - II. Power Supply 12
 - Car Adapter..... 12
 - Alternative possibility of charging the battery..... 12
 - III. Switching on the Device 13
 - Main Views 14
- General Operating Instructions 17**
 - Switching on/off the device..... 17
- Security 18**
 - Storing the password and the information note 18
 - Making settings..... 19
 - SuperPIN and UUID 20

Fingerprint Sensor (optional)	21
Benefits of this technology	21
Storing a fingerprint.....	21
Making subsequent settings.....	23
Password Request	24
Resetting the Navigation System	25
Reset	25
Switching the Device off Completely / Hard Reset	26
Navigation	27
Safety Instructions for Navigation	27
General Instructions	27
Notes for Use in a Vehicle.....	28
Aerial Orientation	29
I. Mounting the Car Holder	29
II. Attaching the Navigation System	30
III. Connecting the Car Adapter	31
IV. Starting the Navigation Software	32
Warning function for traffic monitoring points	33
Integrated FM transmitter (optional)	36
Starting the FM Transmitter.....	36
Overview of the Main Screen.....	36
Description of the Interfaces	37
Frequency selection	37
Speech commands (optional)	38
Handsfree Facility by means of Bluetooth (optional)	43
Starting the Bluetooth Application.....	43
Overview of the Main Screen	43
Pairing the Navigation Device and the Mobile Phone.....	45
Accepting incoming calls	46
Making Calls	46
Show and Read Out Incoming Messages.....	47
During a Call	48
MP3 Player (optional)	49
Overview of the Main Screen.....	49
Select a Title and Move it into the List of Favourites	50
List of Favourites	51
List of the established bookmarks	51
Picture Viewer (optional).....	52
Operating the Picture Viewer.....	52

Main Screen	52
Full Image View.....	53
Travel Guide (optional)	55
Overview of the Main Screen.....	55
Alarm Clock (waking function) (optional)	57
Overview of the main screen	57
Description of the Interfaces	58
Setting the System Time.....	59
Selecting an Alarm Signal.....	60
Setting the Volume	61
Snooze Function	62
Ending the Alarm Clock Application	62
Contact Manager (optional)	63
Create the contacts database.....	63
Operating the Contact Manager.....	64
Overview of the Main Screen.....	64
Storing and Processing Contacts	64
Sudoku (optional)	66
Main Screen	66
Description of the switch fields.....	67
Overview of the game field.....	68
Description of the control buttons	68
Traffic Rules Europe.....	69
FAQ	70
Customer Service	71
Faults and Possible Causes	71
Additional Support.....	71
Appendix	72
Special CleanUp Function.....	72
Synchronisation with the PC.....	75
I. Installing Microsoft® ActiveSync®	75
II. Connecting with the PC	76
Mass Storage mode.....	76
ActiveSync®-Mode.....	77
Alternative possibility of charging the battery.....	77
III. Working with Microsoft® ActiveSync®	77
GPS (Global Positioning System)	78
TMC (Traffic Message Channel) (optional)	79
Premium TMC (optional).....	79

Connecting the TMC Dipole Aerial (optional) 80

Working with Memory Cards81

 Inserting Memory Cards 81

 Removing Memory Cards 81

 Accessing Memory Cards 81

 Data Exchange via Card Reader 82

 Additional Card Material..... 82

 Transfer of card material to a memory card 82

 Alternate method of installing Navigation Software (using a memory card) 83

 Transferring Installation Files and Map Material to the Internal Memory 83

Specifications84

Model Overview85

 FCC Compliance Statement 86

Index87

Safety and Maintenance

Safety Instructions

Please read this section carefully and follow all the instructions provided. This will help ensure reliable operation and prolong the life of your appliance.

Keep the packaging and the user instructions for future reference or enquiries at a later date. If you pass the article on to another person, you should pass on these instructions.

- Never allow children to play with electrical equipment unsupervised.
- Keep the packaging materials, such as plastic bags away from children as there is a danger of suffocation.
- Never open up the housing of the appliance. This contains no user-serviceable parts. If the housing is opened there is a danger of electric shock.
- Please operate your navigation system with an approved power supply only.
- Do not place any objects on the appliance and do not exert any pressure on the display. Otherwise there is a danger that the screen will break.
- To avoid damage, do not touch the screen with sharp objects. We recommend using only the stylus provided or finger when using the touch-screen functionality of the product.
- There is a risk of injury if the display breaks. If this should occur, use protective gloves to pack the broken parts and contact customer support to arrange for disposal. Then wash your hands with soap, since there is a possibility that chemicals may have escaped.

Switch the appliance off immediately, or do not switch it on, and contact Customer Service.

- If the housing of the appliance becomes damaged or liquid may have leaked into it the components must be checked by Customer Service in order to avoid damage!

Data Security

- Every time your data is updated or modified backup copies should be made on an external storage medium. The supplier assumes NO liability for data loss or damage to data storage units, and no claims can be accepted for damages resulting from the loss of data or for consequential damages.

Operating Environment

Failure to follow these instructions may lead to your appliance being damaged. In cases where products are damaged as a result of misuse or neglect the associated guarantee will be considered void.

- Keep your navigation System and all connected devices away from moisture and avoid exposure to dust, heat and direct sunlight, especially in the car.
- Make sure you prevent your appliance from getting wet, e.g. from rain and hail, at all times. Please note that moisture can even build up inside a protective pouch as a result of condensation.
- Avoid heavy vibrations and shaking.
- Please note the device should be installed vertically, this will ensure that the device remains secure within its holder.

Repair

- Please contact our Service Centre if you encounter technical problems with your appliance.
- In the event a repair becomes necessary, please use Medion authorised Service Partners. The address can be found on the back of your guarantee card or online at www.medion.co.uk

Ambient temperature

- The appliance will operate effectively at an ambient temperature of between +32°F and +95°F (0° C and 35 °C) and at a relative humidity of between 10 % and 90 % (non-condensing).
- In the powered down state the appliance can be stored at between -4°F and +140°F (-20 °C + to 60 °C).
- Store the appliance in a safe location, away from high temperatures (e.g. when parking or from direct sunlight).

Electromagnetic Compatibility

- When connecting additional or other components the “Electromagnetic Compatibility Directive” (EMC) must be adhered to. Please note that only screened cable (maximum 10ft) should be used with this appliance.
- For optimal performance, maintain a distance of at least 10 ft. from sources of high-frequency and magnetic interference (televisions, loudspeaker systems, mobile telephones etc.). This will help to avoid malfunctions and loss of data.
- Electronic devices emit electromagnetic waves during operation. These emissions are harmless, but can interfere with other devices operated in close proximity.
While our devices are tested and optimised for electromagnetic compliance in our laboratories, interference during operation may still occur in the device itself and with other devices in its proximity.
Should such interference occur, try to eliminate it by adjusting the positions of and the distances between the devices.
Before driving, please ensure that the electronic systems of the car are working properly.

Connection

When connecting your appliance it is important to observe the following instructions:

Power supply through Car Adapter

- The car adapter should only be connected to the lighter socket of a car (car battery = DC 12V \equiv , truck battery = DC 24V \equiv). If you are in any doubt about the power source in your car, please contact your car manufacturer.

Cabling

- Arrange cables so that they do not cause unnecessary obstruction or risk entanglement or snaring. E.g. ensure that the cables cannot be trod on, or tripped over.
- Do not put any objects on the cable, because it could be damaged if you do so.
- Do not use any force and pay attention to the correct orientation of the plug when connecting the cables and plugs.
- Do not permit any great forces to be exerted on the plug connections, from the side, for example. This will lead to damage in and to your device if you do so.
- Avoid short circuiting and broken cable by not crushing or bending it sharply.

Information about the Regulatory Compliance according to R&TTE

- Bluetooth (optional) (only for model P5455)
- FM transmitter (optional)

The company declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. Complete declarations of conformity are available under www.medion.com/conformity.

C €0984 !

Battery Operation

Your appliance is powered by an integrated battery. In order to prolong the life and efficiency of your battery and ensure safe operation, follow the instructions below:

- Batteries cannot withstand excessive heat. Take care to avoid overheating of appliance and the integrated battery. Failure to comply with this instruction may lead to damage to or, even explosion of the battery.
- Only use the car adapter to charge the battery.



- **Pb** The batteries are special category waste. When disposing of the appliance ensure that this is done correctly. Contact Customer Service for more details.

Maintenance

Warning

There are no user-serviceable parts which require cleaning inside the housing of the appliance.

You can prolong the life of the appliance by taking the following simple steps:

- Always remove the power plug and all connecting cables before cleaning.
- Clean the appliance only with a damp, lint-free cloth.
- Do not use solvents, caustic or gaseous cleaners.

Care of the Display

- Avoid scratching the display surface as this may be easily damaged. We recommend using a display protection film (mylar) to prevent scratching of the screen. Please contact your nearest dealer for this accessory.
The plastic on the display at delivery is purely for protection during transportation!
- Ensure that no traces of water remain on the screen. Water can cause irreversible discoloration.
- Use only a soft, lint-free cloth to clean the screen.
- Do not expose the screen to strong sunlight or ultraviolet radiation.

Recycling and Disposal

The device and its packaging are recyclable.



Device 

At the end of its life, the appliance must not be disposed of in household rubbish. Consult your local waste disposal company to enquire about environmentally-friendly options for disposal.



Packaging

To avoid damage during transport, the appliance was supplied in protective packaging. The majority of packaging is manufactured from materials which can be disposed of in an environmentally friendly manner and be recycled professionally.

Transport

When transporting the appliance please follow the instructions below:

- After transporting the appliance wait until the unit has acclimatised and adjust to surrounding conditions (e.g. room temperature and humidity) prior to use. In the event of large fluctuations in temperature or humidity, condensation or moisture may form inside the appliance. This can cause an electrical short-circuit.
- In order to protect the appliance from dirt, knocks and scratching, please use an appropriate protective case.
- Before travelling ensure that you are aware of the power and communications provisions at your destination. Before travelling obtain any power or communications adapters that may be required for the operation of your device.
- When shipping your appliance we recommend using the original packaging. If the original packaging isn't available please contact customer service for advice.
- When passing through baggage control at airports, it is recommended that you pass the appliance and all magnetic storage media (external hard drives) through the X-ray system (the machine on which your bags are placed). Avoid the magnetic detector (the structure through which you yourself pass) or the magnetic wand (the hand device that the security staff use), since this may corrupt your data.

Supplied Items

Please check the condition of items supplied and check for missing items using the list below. If you find your package to be incomplete, please forward to us all claims for missing items within 14 days from the date of purchase.

The package should include the following:

- Navigation system
- Power cable for cigarette lighter
- Car holder and cradle
- USB cable
- CDs/DVDs with navigation software
- Instruction manual and warranty card

Optional

- TMC dipole antenna
- Memory card
- Earphones
- Protective case

Views

Front Components




Ref	Component	Description
❶	Microphone	
❷	Battery Charge Indicator	The LED will flash orange during the charging process. It will shine constant green when the accumulator is fully charged.
❸	Bluetooth indicator	This LED will blink at different speeds, according to the connection status, if Bluetooth has been activated (only for model P5455).
❹	Touch Screen	Displays the output of your appliance. Tap on the screen with your finger, a stylus or a "blunt" tip to select menu commands or enter data.

Back Components




Ref	Component	Description
❶	Loudspeaker	Plays back music, language statements and warnings.


Top Components

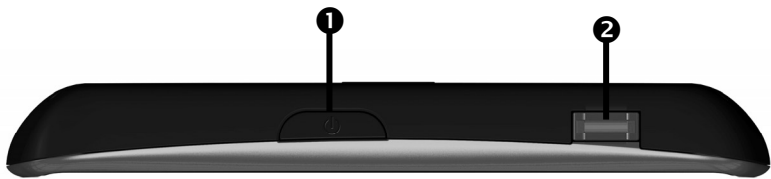

Ref	Component	Description
❶	On-/ Off button	Turn the device on or off by pressing and holding the On/Off button . You will switch to the stand-by mode or reactivate the device by quickly pressing the button.
❷	Fingerprint sensor	See page 21

Bottom Components

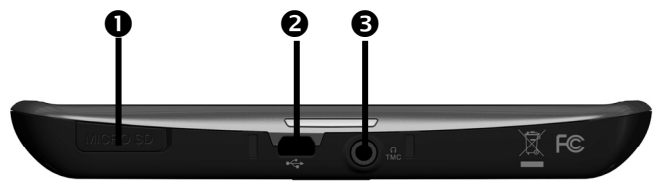

Ref	Component	Description
❶	Memory card insertion slot	Accepts an optional memory card for removable storage.
❷	Mini-USB-Connector	Connection to external power supply as well as connection for connecting to a PC by means of the USB cable (for data matching)
❸	Earphones	Connects to a pair of stereo earphones
		<div><p>Using this appliance at full volume for extended periods of time may cause damage to the hearing capacity of the listener.</p><p>You also have the possibility to connect a TMC dipole antenna here.</p></div>

Initial Set up

The following is a step by step guide to assist in the initial Set-up of the navigation system. Start by removing the protective plastic from the display.

I. Charging the Battery

The battery of your navigation system can be charged in the following ways:

- Using the supplied car adapter or
- using a suitable USB cable.

Attention!

It may be necessary to initially charge the battery for a considerable period of time prior to commencing and running through the initial installation, this is dependent on the level of charge held at the time by the internal battery.

Please observe the following notes relating to the battery:

- The charging status display LED will flash orange until the navigation system is charged. If possible, do not interrupt the charging process until the battery is fully charged. This may take a few hours. The charging status LED will shine constant green if the battery has a high level of charge. Leave the device charging for 20 further minutes, to ensure the battery is fully charged.
- The navigation system can be used during the charging process, but the power supply must not be interrupted during initial set-up.
- Leave the external power supply connected to the navigation system for around 24 hours, so that the backup battery also charges-up fully.
- The external power supply can remain connected; this is recommended for continuous operation. However, the mains adapter (optional) must remain switched on whenever it is connected to the navigation system.
- Even after a power source has been connected to the device it may take several minutes until the device is once again ready to operate again, this occurs if the charging state of the battery is exceptionally low. The battery will continue to be charged if the power supply is connected and the device is switched off.
- The battery will be charged, even if the device is switched off completely.

II. Power Supply

Car Adapter



(similar picture)

1. Plug the jack (❶) of the connection cable into the corresponding receptor at the bottom of your navigation system.
2. Insert the power adapter (❷) into the cigar lighter socket ensuring, that it will not lose contact while driving. This could cause a malfunction.

Alternative possibility of charging the battery

The battery will charge as soon as you connect your navigation device to a switched-on PC or notebook by means of a USB cable. No additional software or updates is required for your PC to perform this function. Do not interrupt the charging process if possible during the initial charge.

Note


The brightness will be adjusted downwards, if necessary, if a USB connection is being set up when the device is switched on.

It is recommended to set the device to the stand-by mode, in order to shorten the charging time by USB.




III. Switching on the Device


You will switch your navigation device on or off again completely by **pressing the On/Off key** for a **long time** (> 3 sec.).

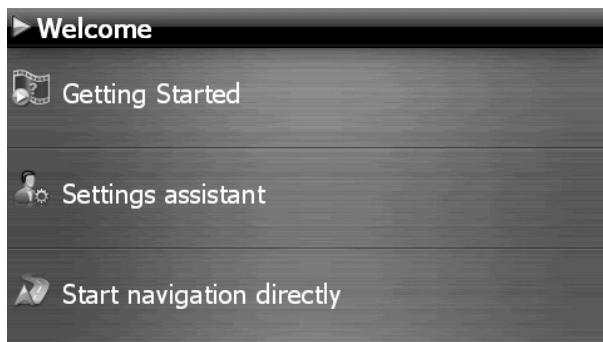The navigation system will start the first setting up automatically. Select the language that you require first. The brand logo will appear and your device will display the **entry screen** after a few seconds.



The following options will be available to you subsequently:

- You will receive a short introduction about bringing your navigation device and the navigation software through the  **Getting Started** switch. The mounting in the vehicle, entering and administering navigation destinations, general instructions for use, etc. are described here, among other aspects.
- You will start the Settings assistant for the configuration of the basic settings of your navigation software by means of the  **Settings assistant** switch.
- You will reach the Main menu of your navigation software by means of the  **Start navigation directly** switch.

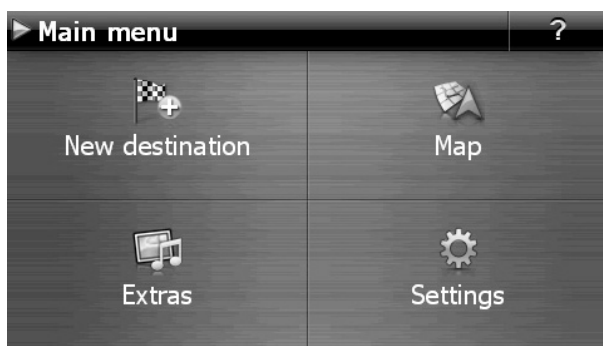





You will have various possibilities of establishing your route and starting the navigation by


means of the  icon:



Main Views

You will find an overview of the different main views of the Main menu here.

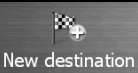Button	Description	Main Screen
	Maps	
	New destination	

 

Extras



Settings

Settings



Note

You will not be able to select the Navigation menu or the settings if the navigation software does not find any map files in the device or on a memory device. Then the **Extras** menu will appear automatically.

Note

Brief pressure on the **on/off button** will be enough to switch the device on or off, provided that your navigation system is connected to an external source of electricity or is running in battery operation (standby mode).

You can adjust the period of operation to suit your needs using the **Settings** button on the main screen of your device. Your device is delivered in a status in which it will not switch off independently.

Press and hold the **On/Off key** (> 3 sec.), to completely switch off the device.

No data will be lost as data is stored in the internal memory. The starting process will only last slightly longer.

Your navigation system will use a low amount of electricity and the batteries will be discharged, even when in standby mode.

The final installation of the navigation software will take place automatically from the internal memory, during the initial set up, if your device has already been equipped with the basic data of the navigation software at the factory. Follow the instructions on the screen.

An optional memory card must always be inserted in the device while the navigation system is being used.

It will be necessary to carry out a Reset to restart the navigation system if the memory card has been removed (see page 25).

Please also read the chapter **Navigation** starting on page 27.

General Operating Instructions

Switching on/off the device

Your device will be in its normal operating state after the initial set up. You can activate and deactivate your device with the On-/Off switch.


1. To start your navigation system press briefly the On-/Off switch.

Note




Your device is delivered in a status in which it will not switch off independently. You can adjust the period of operation to suit your needs using the **Settings** button on the main screen of your device.

Your navigation system will use a low amount of electricity and the batteries will be discharged, even when it is in the standby mode.

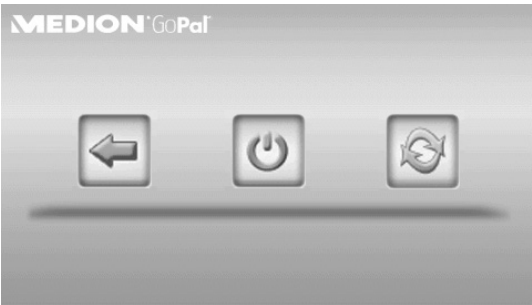2. To switch off your navigation system briefly press the On-/Off switch .
The following screen will appear:



You have three possible choices:

Button	Description
	Cancel/Back Return to previous view with this key, if you have accidentally called up this screen.
	Standby Mode (Energy saving mode) The device will go into Standby Mode if this key is clicked.
	Reset You can carry out a reset by clicking this key.

The device will go into the Standby mode automatically after a few seconds if you do not want to select any of these three possibilities.

For further settings within the Standby mode also see the chapter on “Special CleanUp Function”, page 72, point 8.

This display will also appear after the delay period of a few seconds has expired, if you have activated the DC AutoSuspend Comfort Function.


Security

You have the possibility of protecting your device against external access by means of this function. Some one-off settings will have to be made before you will be able to use this function. Proceed as follows to do this:

Storing the password and the information note


1. Go to **Settings** and then to **Device settings** by means of the main display.
2. Click on **Security**, in order to start the respective function. The following display will appear:



3. Click on  , in order to enter a password.
4. A keyboard will appear. Enter a password with it.

Note

The password must consist of at least 4 symbols. Use a combination of letters (A – Z) and numbers (0 - 9). Keep the password in a safe place.

5. Confirm the password with the  symbol after you have entered it.
6. Enter the password in the second field to reconfirm it and in order to avoid potential careless mistakes.

Note




The password will be displayed in the form of small stars (****).

7. An additional text field will appear after you have entered the password. Enter an information note here that will serve as a support for remembering your password. You will be able to call up this information if you have forgotten or mislaid the password.

Making settings


The following selection window, through which you will make the settings for the Security Function, will appear after you have entered the password and the information note successfully.



Button	Description
	Set here whether the device should request the password after a hard reset.
	Set here whether the device should request the password after a restart.
	Set here whether the device should request the password after the device has been switched on from the Standby mode.

SuperPIN and UUID

The SuperPIN and the UUID (Universally Unique Identifier = definite device identification) will appear on the display after you have confirmed the settings.

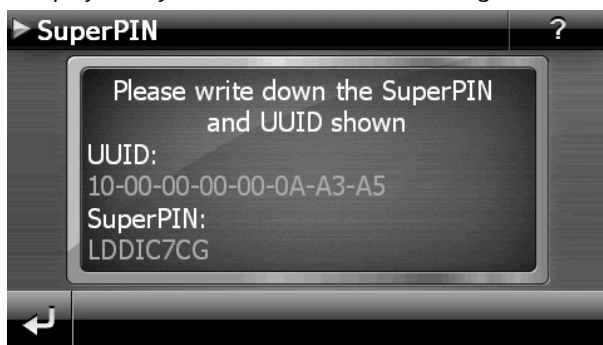

Note

Record this data in your Operating Instructions (see Page 1) and keep them in a safe place.

You will need this information if you have entered the password incorrectly 3 times. The navigation device can then only be released with this information.

Fingerprint Sensor (optional)

Your new navigation system is equipped with a **fingerprint sensor**.



Benefits of this technology


First of all, it provides extra **comfort**. You will not have to memorize passwords, because the software manages those for you.

Note

Store your passwords and access data in a safe place. If you cannot identify yourself by your fingerprint (e.g., when working on someone else's computer), you can log in with your access data in the usual way.

Storing a fingerprint


1. Go to the  **Profile settings** sub-menu and select the  **Change fingerprint** point there, to store your fingerprint.

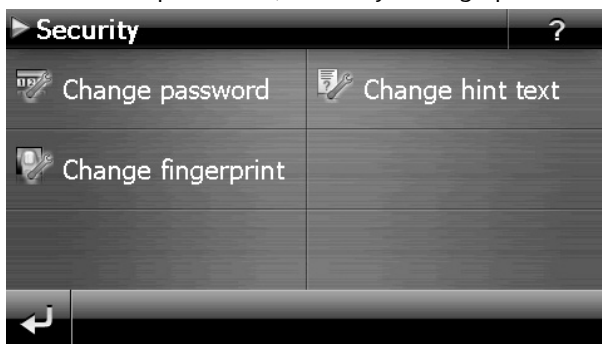

2. You will be requested to stroke your finger slowly across the sensor several times:



3. The following screen will appear if the scanning process of the fingerprint has been successful:

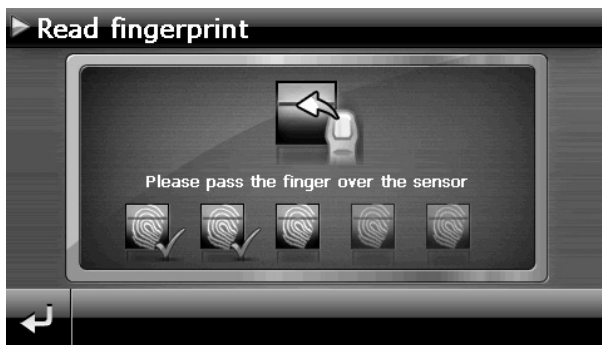

4. Repeat this process until the fingerprint has been scanned in successfully several times.
5. You will be requested whether you want to store the fingerprint that has been scanned in the following screen:








6. Confirm with .

Now, you will be able to log into your device with the stored fingerprint.

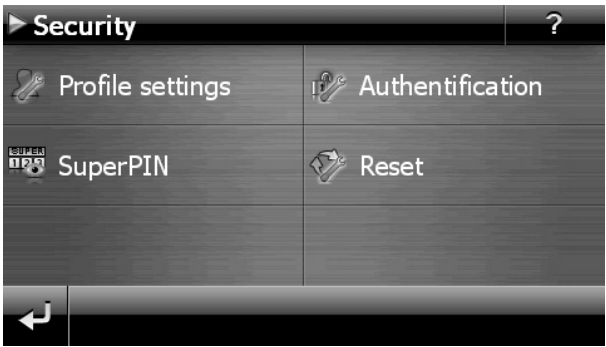Making subsequent settings

Start the Security Function if you have already entered a password or stored a fingerprint and would like to make a subsequent setting or to change the password. The following display will appear:




Button	Description
 Profile settings	Change the password or the information text; Store /change a fingerprint
 Authentication	Authentication settings(see Page 19, Making settings)
 SuperPIN	Display SuperPIN and UUID (see Page 20)
 Reset	Reverses the complete security function. All security settings and passwords will have been deleted after this function has been carried out. You will have to enter and confirm your password again to be able to carry out the security function.

Password Request


A password request will appear at the restarting of the device, according to the setting, if you have established a password by means of the Security Function.



1. Enter the password stored by you by means of the keyboard or draw the finger (fingerprint) previously chosen by you across the sensor. The symbol  shows you if you have stored a fingerprint.

Note

The password will be displayed in the form of small stars (****).

2. Click on the question symbol to have the information note displayed, if you have forgotten the password and need the Help setting.
3. Click on  to confirm the entry.

Note

You will have to enter the SuperPIN if you have entered the password incorrectly 3 times. Contact your Service Center, giving the UUID, if you have also mislaid it. The UUID will be faded out in the lower display.

Resetting the Navigation System

You can reset your navigation system if it is no longer reacting or working properly.


This option restarts the navigation system, without reinstallation being necessary. A reset is often used in order to reorganise the memory. In doing so all programs that are running are interrupted and the working memory is reinitialised.

You can carry out two different Reset procedures with your device.

Reset

The following screen will appear if you press the On/Off switch for a short time:



If you want to carry out a Reset, tap on .

You will find further information in the chapter **Switching on/off the device**, page 17.

Switching the Device off Completely / Hard Reset

Attention!

A hard reset will delete all data in the temporary memory.

Your navigation system will normally be in the Standby Mode, if you have switched it off by pressing the on/off button briefly. In addition, the system can be switched off completely; the consumption of energy can be kept as low as possible through this. All the data in the temporary memory will be lost if the device is switched off completely (hard reset).

To switch your navigation system off completely:

1. Press and **hold** the **On/Off key (> 3 sec.)**, to switch off the device.
2. Press and **hold** the **On/Off key (> 3 sec.)**, to switch the device on again.

A reinstallation will not be necessary after a hard reset if your device has already been equipped with the basic data of the navigation software in the permanent memory.

Navigation

Safety Instructions for Navigation

The bundled product CD/DVD contains a comprehensive instruction manual.

General Instructions

- Do not adjust or configure the navigation system whilst driving, this is to protect yourself and others from accidents!
- In the event that you do not understand the voice instruction or if you are in any doubt about what to do at the next intersection, then the map or arrow displayed on the screen will provide you with a quick orientation. Only look at the display when it is safe to do so and driving conditions allow!

Legal remark

The use of devices that warn for traffic monitoring systems (like „speed traps“) is prohibited in some countries, like Germany, Ireland and Switzerland. Please obtain information about the legal situation and apply the warning function only where allowed. We cannot be held liable for damages caused by the use of the warning function.

Attention!

The road layout and driving rules take precedence over the instructions of the navigation system. Only follow the instructions when circumstances and driving rules permit it! The navigation system will guide you to your destination even when you have to deviate from your planned route.

- The direction statements of the navigation system given do not release the driver of the vehicle from his or her duty of care or personal responsibility.
- Plan routes before you leave. If you want to plan a new route whilst on the road pull over and stop driving.
- In order to receive the GPS signal correctly, keep away from metal objects as they may hinder reception. Attach the navigation system onto the inside of the windscreen or near the windscreen with the suction cup. Try out different positions in your vehicle in order to find the best reception.

Notes for Use in a Vehicle

- Take care that the holder does not present any risk to safety, even in the case of an accident, when installing it.
- Take care that the cable does not impede any safety components.
- The display of your navigation system may show “light reflections”. Please take care of not being “blinded” during operation.
- Do not mount the components within the operating range of any airbags.
- Check the secure adherence of the suction cup at regular intervals.
- The power plug will consume power, even if no device is connected. Remove it when not in use to avoid draining the car battery.
- Check all safety equipment in your car after installation.

Note

Do not leave your navigation software in the vehicle when you leave it unattended. You should also uninstall the holder for security reasons.

Aerial Orientation

The aerial must have unrestricted access to the sky to receive GPS satellite signals. Place the aerial as horizontally as possible for this reason. Try out aerial and installation possibilities in the vehicle if the reception is inadequate.

I. Mounting the Car Holder

Attention!

Only fix the holder for the navigation system to the windscreen, if it does not impede the view.



(similar picture)

Note

Your navigation device can also be equipped with a different but similar vehicle attachment as an alternative, according to the version.


Note

Clean the windscreen thoroughly with a glass cleaner. Warm the disk and the nipple slightly at temperatures below 15° C.

Place the holder with the suction head directly onto the wind screen and press the lever on the suction head downwards. The sucker will attach itself to the background firmly.

II. Attaching the Navigation System

1. Connect the car adapter (see page 12) and, if necessary, the TMC aerial to your navigation system and insert the memory card.
2. Place the device below in the centre of the holder.
3. Press it gently **backwards** (❶) until it engages audibly (❷).

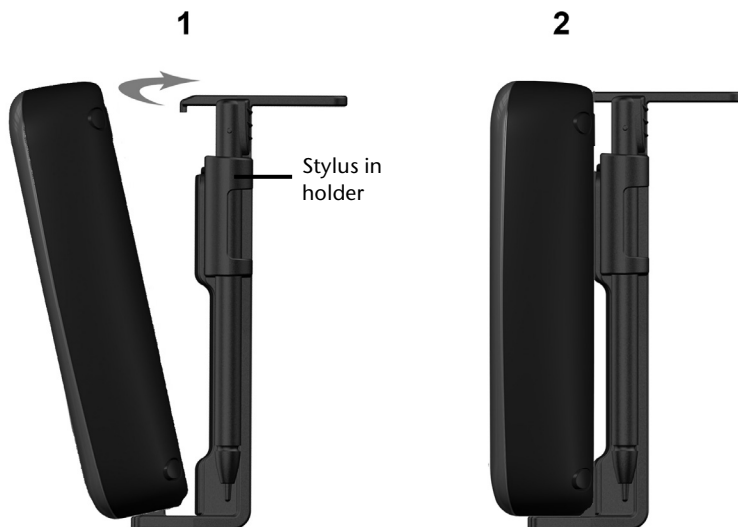

4. Place the holder on the fixing catches of the car holder.
5. Now, push the unit **to the bottom** until it engages audibly.
6. Now you will be able to place the complete unit on the cleaned windscreen or the suction plate.

III. Connecting the Car Adapter



(similar picture)

1. Plug the jack (❶) of the connection cable into the corresponding receptor at the bottom of your navigation system.
2. Insert the power adapter (❷) into the cigar lighter socket ensuring, that it will not lose contact while driving. This could cause a malfunction.

Note

Remove the power adapter from the cigarette lighter socket when ending a trip or when parking the car for a extended period of time. Otherwise the car battery could be drained. In this case use the power switch to turn off the navigation system.

 
IV. Starting the Navigation Software



Note

Your memory card will always have to be inserted into the device during the use of the navigation system, if the card contains (additional) mapping material.

It will be necessary to carry out a reset to restart the navigation system if the memory card has been removed while the system was being used (see page 25). According to the navigation system the reset is carried out automatically.

1. Switch on your navigation system.
2. The Navigation software will start automatically or after tapping on the navigation control button on the main screen, according to the version.



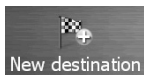3. Tap on  on the screen for entering the destination. Enter the destination address. Confirm your entry by clicking the  symbol to start the navigation. After a short time, if the satellite reception is adequate you will receive augmented language statements.

Further information regarding the navigation software can be found in the **comprehensive manual on your navigation CD/DVD**. This is a pdf-file you can read and print with Acrobat Reader.


Note

The GPS-receiver will require some minutes for initialisation when deployed for the first time. Even when GPS signal reception is indicated the navigation could be imprecise. In all future instances it will take about 30-60 seconds until a correct GPS-signal is available, sufficient "sight" of the satellite is a prerequisite.

Warning function for traffic monitoring points

The following display will appear if the warning function for traffic monitoring points (optional) has been installed:




Confirm with , if you want to use navigation with the warning function for traffic monitoring points.


Tap on the **Configure special functions** interface in the **Settings** Menu, in order to configure the warning function.



The following screen appears. Tap on **POI-Warner**:

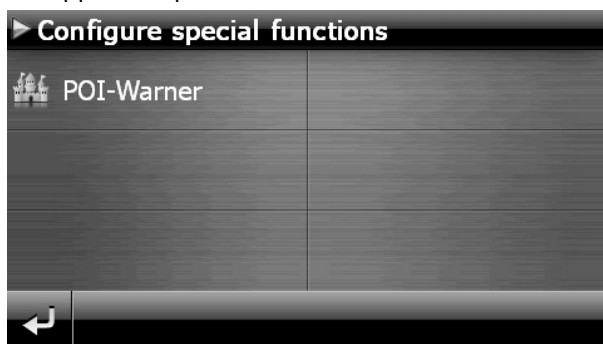

Tap on **Speed cam (stationary)** here, in order to make the settings for the 'radar fixes':

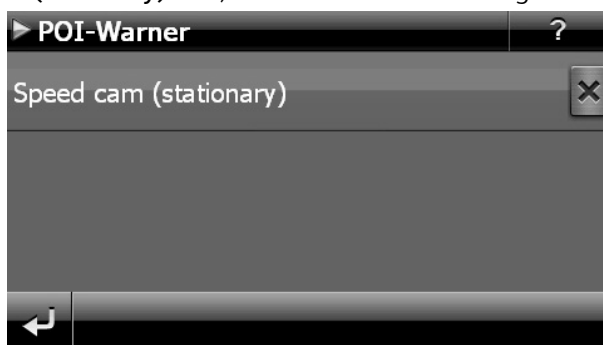

Here, you have the option of having the traffic monitoring points represented on a map or faded out. You can also set whether you would like to be informed by acoustic signals before reaching a traffic monitoring point.



Acoustic information about a traffic monitoring point will be given by a warning sound approx. 15 seconds before it is reached. Then, another double warning sound will be given approx. 7 seconds before it is reached. Four warning sounds will give information that the speed is too high. In addition, the distance to a monitoring point will be indicated by a bar indicating closeness (left lower edge of the display).

Sample view if map presentation has been activated:



Note

Please pay attention to the fact that traffic monitoring points are not preset in all countries.

*** Legal remark**

The use of devices that warn about traffic monitoring systems (like “speed traps”) is prohibited in some countries, i. e. Germany, Ireland and Switzerland. Please obtain information about the legal situation and apply the warning function only where allowed. We cannot be held liable for damages caused by the warning function.

Integrated FM transmitter (optional)

Depending on the software equipment your navigation system is equipped with an **FM transmitter** (UKW transmitter with a weak transmission performance).

For using the FM transmitter we recommend the power supply through the cigarette lighter. You will be able to transmit navigation announcements and other audio announcements from the navigation system to the car radio without a cable with the aid of the FM transmitter.

Legal remark

The use of an FM transmitter is forbidden in some countries. Please obtain information about the legal position and only use this function where it is permitted. We shall not be liable for damages arising from the use of this device.






Starting the FM Transmitter

To start the FM transmitter, tap on **Settings**, **FM transmitter** in the navigation menu.


Overview of the Main Screen



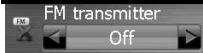

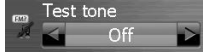Description of the Interfaces

Button	Description
	To switch the FM Transmitter on/off
	Reactivate the FM transmitter (reactivation notification when the device is inserted into the holder)
	Setting the frequency (see page 37)
	Activates/deactivates the sample piece of music for the setting in the radio.
	Back

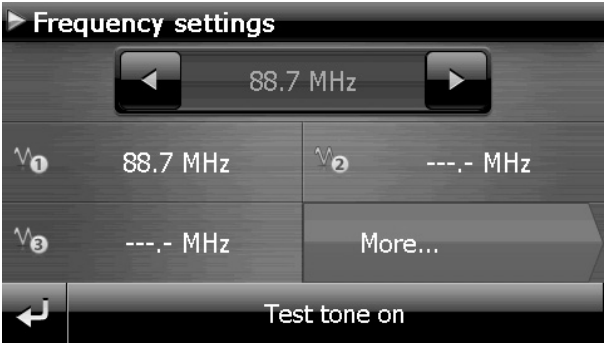Frequency selection



You can set the required radio frequency (UKW) here with the  and the  interfaces.

Note

Move to a different frequency (through the radio transmitter, for example) if the use of the frequency is overloaded. You have the possibility of storing up to six different frequencies.

Proceed as follows, in order to store the frequency currently set:

1. Choose the desired frequency.
 2. Click on this interface longer.
 3. Tap on the required switch again for longer to overwrite a stored frequency.
- The frequency will have been stored after the signal sound.

Speech commands (optional)

The Speech Entry mode can be activated by means of the function during navigation. A short information sound will indicate that the navigation system is ready for the speech entry.

Explanation of the symbol:

- () optional words;
- [] Fillers
- „ | “Alternatives;
- < > Content displayed can be spoken

The following commands will be possible here according to the current view:

Range of validity	Command
Always applicable	abort cancel stop back go back reverse help
Global commands	Help (general global) (Help Commands) (cancel abort) [dialog] [go] (back backwards) navigation (enter select change) [the a] [new] (city town location) (enter select) [a] new target destination [a] [new] target destination (enter select) target destination new address ((enter select) [a] [new] new) (zip [code] postcode) [show] map [view] Menu Main menu Navigation menu volume settings change volume decrease volume increase volume mute volume shut up

List commands	next page scroll down previous page scroll up
Main menu	[enter] new destination Enter address [show] map [view] settings (other additional) (applications) additional applications extras [enter] new destination Enter address [show] map [view] settings (other additional) (applications) additional applications extras [enter] new destination Enter address
Entering the town or city (Switch to post code entry) Post code entry	change country enter country correct country other country change postcode enter postcode correct postcode other postcode postcode entry change postal code enter postal code correct postal code other postal code postal code entry change zip code enter zip code correct zip code other zip code zip code entry change zip enter zip correct zip other zip zip entry
(Switch to town or city entry) Post code entry	change country enter country correct country other country change location enter location correct location change city enter city correct city other location other city
Street entry (If the town has been entered) (If the post code has been entered)	change location enter location correct location change city enter city correct city other location other city change postcode enter postcode correct postcode other postcode postcode entry change postal code enter postal code correct postal code other postal code postal code entry change zip code enter zip code correct zip code other zip code zip code entry change zip enter zip correct zip other zip zip entry centre city centre downtown town centre to centre to city centre to town centre central business district points of interest interesting sights P O I start navigation begin navigation I don't know I've no idea

House number entry	change street enter street correct street change street correct street other street crossroads junction intersection middle of the road middle of street start navigation begin navigation I don't know I've no idea
Multiple routes	Calculate (alternatives alternative route other routes) [please] [show] destination information [go to] information about destination Destination information Standard Alternative one Alternative 1 Alternative two Alternative 2 Centre [View Map Map view] centre [[the] map] zoom in zoom out Calculate (alternatives alternative route other routes) [please] [show] destination information [go to] information about destination Destination information Standard
Current route / Route information/ Overview map	directions route description routes route options route settings Routes (traffic [jam] congestion) (information situation info conditions) Traffic conditions current position destination [area]
Volume settings	(Volume click sounds (lower reduce) (keyboard click click) [volume]) (down) (Volume click sounds (increase raise) (keyboard click click) [volume]) (up) (MP3 Player volume (lower reduce) (M P 3 music media player) [volume]) (down) (Volume click sounds (increase raise) (M P 3 music media player multimedia) [volume]) (up) (Voice volume [decrease] speech [volume]) (down) (Voice volume [increase] speech [volume]) (up)

Map

[display|show] (turn icons | arrow | arrow view | direction changes)
[display|show] (compass [view] | G P S view)
no map | map off | (switch off | hide) map
[display|show] [only] [the] [normal|simple] (map [view] | view | splitscreen | Splitskrihn)
[display|show] (3 D | three dimensional) [view | map | perspective]
[display|show] (2 D | two dimensional) [view | map | perspective]
[display|show] [view|orientation] [in] (direction of (travel | motion) | driving direction)
Map optimised | optimise map | [2D] map orientation optimised | orientation optimised
[display|show] [2 D | two dimensional] (north | northern) [view | map [view]]
Centre [View | Map | Map view] | centre [[the] map]
zoom in
zoom out
Menu | Main menu | Navigation menu
Quick menu | [menu] current route
[display|show] (turn icons | arrow | arrow view | direction changes)
[display|show] (compass [view] | G P S view)
no map | map off | (switch off | hide) map
[display|show] [only] [the] [normal|simple] (map [view] | view | splitscreen | Splitskrihn)
[display|show] (3 D | three dimensional) [view | map | perspective]
[display|show] (2 D | two dimensional) [view | map | perspective]
[display|show] [view|orientation] [in] (direction of (travel | motion) | driving direction)
Map optimised | optimise map | [2D] map orientation optimised | orientation optimised
[display|show] [2 D | two dimensional] (north | northern) [view | map [view]]
Centre [View | Map | Map view] | centre [[the] map]

zoom in

zoom out

Menu | Main menu | Navigation menu

Quick menu | [menu] current route

Note

Speak the commands loudly and clearly in the direction of the navigation system. No incidental noises (radio, ventilation or loud conversation) should arise during the speech entry.

Handsfree Facility by means of Bluetooth (optional)

The Bluetooth technology serves to bridge short distances wirelessly. Bluetooth devices transmit data wirelessly, so that other devices that also support this technology can communicate with each other without cables.

Both devices will have to be adjusted to each other (pairing), before you will be able to use your navigation system as handsfree equipment with your Bluetooth mobile phone.

Note

Please read how you switch on the Bluetooth function in the Operating Instructions of your mobile phone.

Starting the Bluetooth Application

Tap on **Bluetooth Dialer**.















Note

The function for active use will have to be reactivated first if Bluetooth has been deactivated manually.

1. Now the main Bluetooth screen will appear on your navigation device.

Overview of the Main Screen



Button	Name	Description
	Course of call	Displays the course of calls put through and received.
	News	View the postbox of your mobile phone through this symbol. You will be able to receive, write and send messages.
	Telephone Book	Call the contacts stored in the mobile phone through this symbol. The support of this function depends on the respective mobile.
	Back	Previous Page of the main display.
	Delete	Delete the number entered by means of the keyboard with this field.
	Calling	Select the number entered by means of the keyboard with this field.
	Keypad	Enter the digits of the telephone number to be called by means of the keyboard.
	Volume	Set the volume of the microphone and the loud-speaker by means of this symbol.
	Settings of the hands-free facility	 New message – Options for displaying new messages
		 Pairing – Link the navigation device to the mobile
		 Settings for automatic synchronization between the navigation device and the mobile phone
		 Bluetooth – Activate or deactivate the Bluetooth function
		 Call announcement – Switch on and off for the announcement of the telephone number / contact in the case of incoming calls
		 Setting of the basic volume of the microphone and the loudspeaker.

Pairing the Navigation Device and the Mobile Phone


Note


Your navigation device will search for a device in the case of a connection to the remote loudspeaker in principle. The range of functions of the hands-free loudspeaker can be restricted according the type of the mobile.

1. Activate the Bluetooth function on your mobile phone.

Note

Each mobile phone uses different paths to do this. Read the instructions of your mobile phone under all circumstances for this reason.

2. Select the  option (Pairing). The search for a blue-tooth device will start automatically during the first setting up of the device.
3. You will start the search again with 'Search for mobile'.
4. Select the corresponding mobile phone from the list.

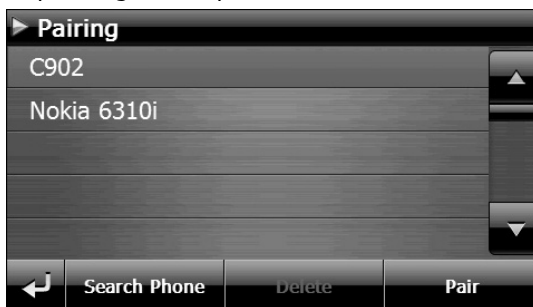

5. Tap on the Pair switch and then on the Couple with mobile switch to confirm.





6. Your mobile phone will recognize the navigation device. You will be requested to enter a 4-digit PIN code. This is 1 2 3 4 for your navigation device.
7. Then, the connection must be accepted by one or several confirmation messages on your mobile. The loudspeaker will be available to you through the navigation system after this.

Note

This procedure will have to be repeated as soon as you have switched off the navigation system or a spatial separation between your mobile phone and the navigation device arises.


Accepting incoming calls




Button	Description
	Accept calls
	Reject/terminate calls

Making Calls



1. Tap on the keypad in the main Bluetooth screen and enter the number that you wish to call.

2. Start the call with  .

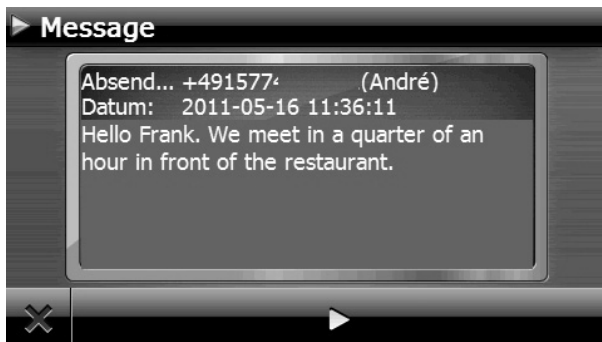Show and Read Out Incoming Messages



You will be able to read incoming messages or also to have them read out in addition, if your mobile supports these functions.

1. Activate the Show and read out option under Settings > Message for this.
2. The telephone number or the contact from the Phone Book will be read out initially in the case of an incoming message.
3. Then you will be able to return to the previous view by means of  or to have the message read out by tapping on the  field.




Attention!

The street management and the traffic regulations have priority over the instructions from the navigation system. Only follow the instructions if the circumstances and the traffic regulations permit it.

Pay attention to the safety warnings and the regulations of the respective country with regard to the use of mobiles when driving.

During a Call



Button	Description
	End call
	Mute for microphone and volume settings
	Return the conversation to your mobile

MP3 Player (optional)

Depending on the software equipment your navigation system is equipped with a **MP3- Player**. Start the MP3 player from the menu **Extras** by tapping the **MP3 Player** switch area. All the MP3 files located on a memory card can be taken into a List of Favourites and will be available for replay. (The memory card must not be write-protected in this case.)


Overview of the Main Screen



Button	Description
	Reduces the screen brightness to a minimum, to save electricity.
	Determine/add bookmarks.
or	Increase or decrease the volume. The display in the upper right corner of the screen will show the current level of the volume.
	Break off action / back to the previous menu
or	Move to the previous or next file. It will be possible to skip backwards or forwards within the title playing while it is being played.
	Play the playback.
	Stop the playback.
	Opens the List of Favourites.




Files	Displays the files stored on the flash disk and/or on the memory card.
Settings	You will make the settings of the MP3 player here.


Select a Title and Move it into the List of Favourites


Tap on  and select the title that you would like to move into the List of Favourites, in order to select a title.




will have three possibilities of marking the title here:

- Tap on  in order to mark all the titles, including all sub-directories.
- Tap on  in order to mark all titles currently in view.
- Tap on  to delete all marks within a directory.


The selected titles will be indicated by a .


Tap on , in order to confirm your selection. The titles marked will not be moved into the List of Favourites **until then**.


Tap the file required and select the requisite title, in order to select a title in the sub-directories.

The  symbol will be shown if not all the titles in a directory have not been selected.

List of Favourites

You will reach the List of Favourites by tapping on the  :

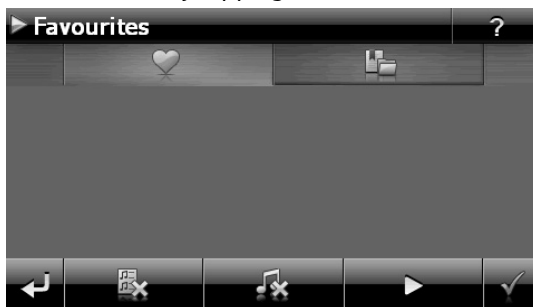


You will delete all titles with .


You will delete individual titles with .


Confirm with , in order to take over the new selection into the List of Favourites.

List of the established bookmarks

You will reach the list of the established bookmarks by clicking on the  symbol :



You will delete all bookmarks with the  symbol.

You will delete an individual bookmark with the  symbol.

Operation with the  symbol to take over a new selection into the list of bookmarks.

Picture Viewer (optional)

Depending on the software equipment your navigation system is equipped with a **Picture Viewer**.

You can view the jpg format images on your memory card on your navigation system, with the **Picture Viewer**. All the images on the memory card will be available immediately.

Operating the Picture Viewer


Start the Picture Viewer from the menu **Extras** by tapping on the **Picture Viewer** button. Alternatively, the Picture Viewer can also be started from the navigation software itself.


Main Screen




Fig.: Miniature view

Move the miniature view to the left or to the right with the **arrow keys**. Tap on a specific images to display it in the Full Image Mode.

Return to the start in miniature view by tapping on .

You can end the application by tapping on the  symbol.

Start the **slide show** by tapping the  symbol.

Full Image View



Fig.: Full image view without service strip

Tap in the **lower** area of the screen in the full image view, in order to activate the **service strip**:

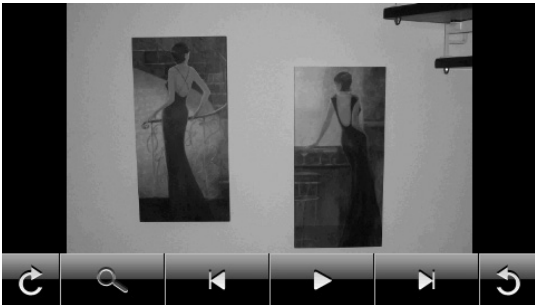









Fig.: Full image view with service strip

Button	Description
	Turn it clockwise by 90° in stages
	Fade in grid
	Previous picture
	Start the slide show
	Pause the slide show
	Next picture
	Turn it counter-clockwise by 90° in stages

You will return to the miniature view by tapping in the centre of the image.


The image displayed will be subdivided into 6 fields by tapping on the  symbol (fade in grid).



Fig.: Full image mode with grid

Tap on a square in the grid to zoom in on that area of the picture:



Fig.: Zoom-in Mode

Tap on the centre of the image to go back to viewing the full picture.

Travel Guide (optional)

Depending on the software equipment your navigation system is equipped with a **Travel Guide**. The Travel Guide will supply general information about the different areas of individual towns and cities or regions in Europe, such as sights, restaurants, culture and travel information. Start the **Travel Guide** from the menu **Extras** by tapping on the **Travel Guide** button.

Overview of the Main Screen



Select initially the **Country** through the **Place** and then **Category**, if you want to find any information. Then select the category, for example. You will be able to filter the search results by entering a **Price class** and/or an **Assessment**, if required.

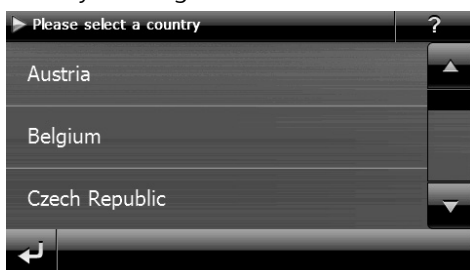


Fig. 1

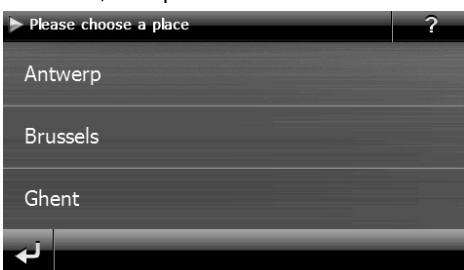


Fig. 2



Fig. 3

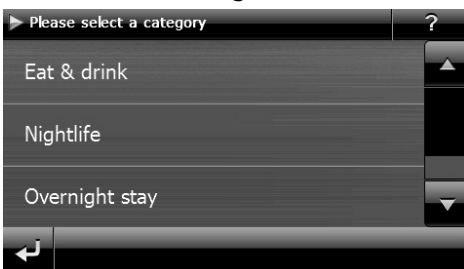


Fig. 4

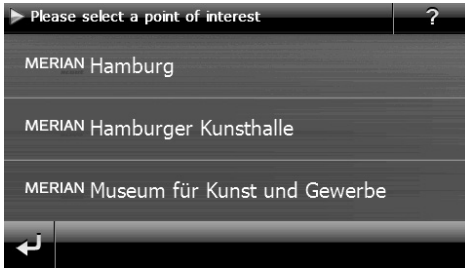


Fig. 5

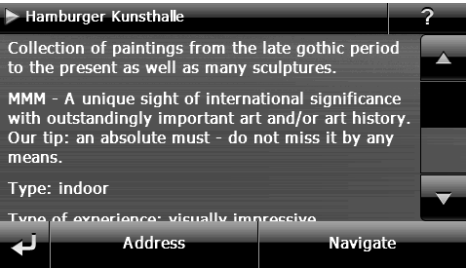



Fig. 6



Fig. 7

Confirm with **Navigate**, if you want to navigate to the destination displayed. The address will then be available to the navigation software as the destination.

Button	Description
	Previous image
Address	Shows the address of the selected category
Pictures	Shows the available images in the selected category.
Navigate	Tap on this control button to navigate directly to the selected address.

Note

The possible selections within the Travel Guide can vary according to the software available.

Alarm Clock (waking function) (optional)


Depending on the software equipment your navigation system is equipped with a **Alarm Clock/waking function**.

Start this function from the menu **Extras** by tapping on the **Alarm Clock button**.

The waking function can work when the device is switched off (Standby Mode / Power Saving Mode) as well as a reminder during the current navigation.

Overview of the main screen



This view will appear if you have not yet set up a waking time. Enter an alarm time in the **24-hour format** and confirm your entry with .

Description of the Interfaces


Button	Description
	Current system time
	Setting-up mode (Setting volumes, system time and alarm)
	Night mode (Standby mode)
	Reset/deactivate the waking function
	Setting the alarm time
	Delete the entry
	Confirmation interface
	Increase the volume / Reduce the volume
	Back to the previous menu
	Close the application

Setting the System Time

The display of the current time will be located in the upper right corner of the screen. You can adjust it as follows:

1. Tap on **Settings** in the main screen. The following screen will appear:




2. Tap on  to change the time setting:






Note

The system time is updated by GPS reception. Pay attention to the time zone settings.

Selecting an Alarm Signal

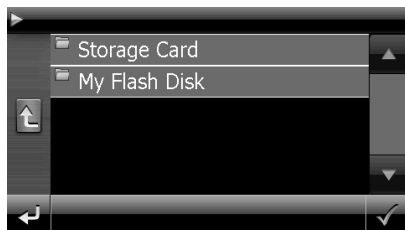1. To select an alarm signal touch the  symbol.



2. Select the desired alarm sound and confirm the selection with .
3. Tap on the corresponding file in the Memory Card directory if you would like to select an alarm tone from the storage card and confirm again with .




4. Select the desired alarm sound and confirm with .



5. The selected alarm signal is marked by a .


6. Close the application with .

Setting the Volume

You can adjust the volume of the alarm signal by tapping on the  interface.


Note


The volume configured here only relates to the alarm signal and will not change the volume of the language output of the navigation system or other functions of the system.

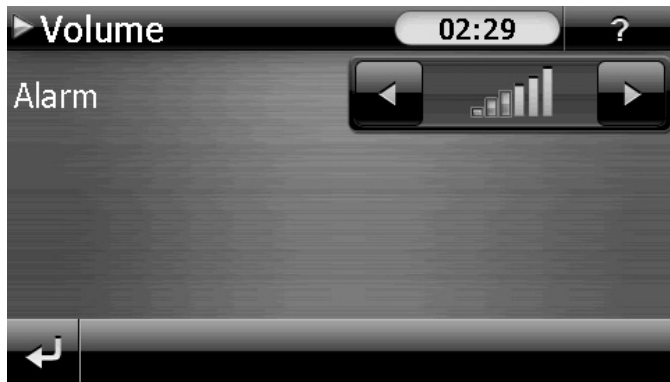



Snooze Function

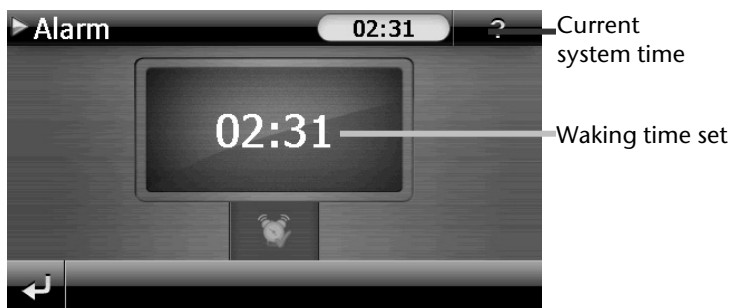

You will have the possibility of making the waking signal repeat **at regular intervals** by means of the Snooze function, once it has sounded at the alarm time set.

3. Tap on  to activate the Snooze function.



4. To be wakened again at the same time on the following day tap on the  button.
5. Tap on  to return to the screen before the alarm signal started.

Ending the Alarm Clock Application

1. Tap on  to deactivate the alarm time set.
2. You will find yourself in the Setting-up mode.
3. Tap on  in order to leave the application. An alarm time is not set.

Contact Manager (optional)

Depending on the software equipment your navigation system is equipped with a **Contact Manager**. You will be able to create the contacts database (from Outlook) or administrate your contacts with the **Contact Manager**.

Create the contacts database


The Contact Manager will search for the contact database in the internal device memory (under 'My Flash Disc'), in order to store your contacts. The **contacts.db** file must be present in the **contacts** sub-directory for this purpose:

- \My Flash Disk\settings\0\contacts\contacts.db

The more recent contact database will be used, if one is found in **My Flash Disk**.


You will be able to export contacts from Microsoft Outlook with the Medion GoPal Assistant. Proceed as follows to do this:

1. Connect your navigation system to the computer.
2. Select the destination for the synchronisation (internal memory of the device) in Gopal Assistant.
3. Select **Synchronize**.
4. Select **Export Outlook contacts**.
5. Confirm your choice with **Synchronize**.
6. The contacts database will be transferred to your navigation system.

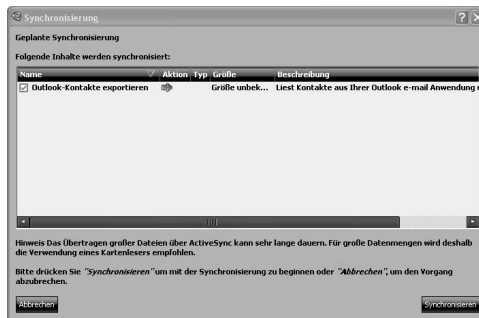

The following screen will appear, if no database has been found:



Confirm the storage of a new contact database with .


Operating the Contact Manager

Start the Contact Manager from the menu **Extras** by tapping on the **Contact Manager** button.

Overview of the Main Screen



Storing and Processing Contacts

Select  in the main screen and follow the instructions on the screen, in order to store a new contact:

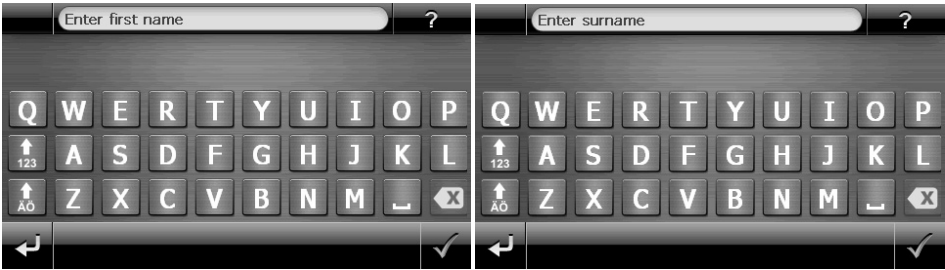
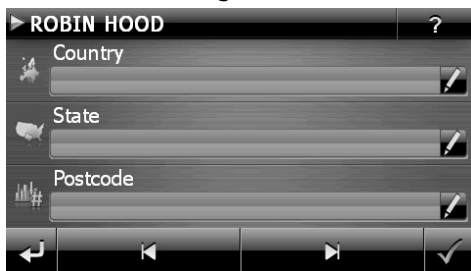


Fig. 1**Fig. 2****Fig. 3**


Tap on  and select the required image from the memory card, to allocate an image to the contact:

Fig. 4**Fig. 5****Fig. 6****Fig. 7**

Sudoku (optional)

Depending on the software equipment your navigation system is equipped with the game **Sudoku**.

Start the game from the menu **Extras** by tapping on the **Sudoku** switch field.

Sudoku is a number puzzle. The puzzle area is square and subdivided into nine sections. Each section consists of 9 smaller squares.

When playing Sudoku, the **aim** is to fill all the 81 number fields using the numbers 1-9. Each number must only appear once in each section at the same time. Each number must only appear once in each row and column.

Some number fields will already have been populated prior to the start of the game.


Main Screen






Description of the switch fields

Button	Description
	Start the game
	You will receive notes about a solution by tapping on this control button. Tap on the control button again to hide the notes about a solution.
	You will receive the solutions of the number fields by tapping on this control button. Tap on the control button again to hide the solutions.
	A new Sudoku will be opened by tapping on this control button.
	Settings You have the following possibilities in the Settings menu: <div> <div></div> <div>The current game will be stored by tapping on this control button.</div> <div></div> <div>You will load a game that you have started onto the screen by tapping on this control button.</div> <div></div> <div>Delete a stored game status.</div> <div></div> <div>You can set the level of difficulty here.</div> <div></div> <div>Back to the current game.</div> </div>

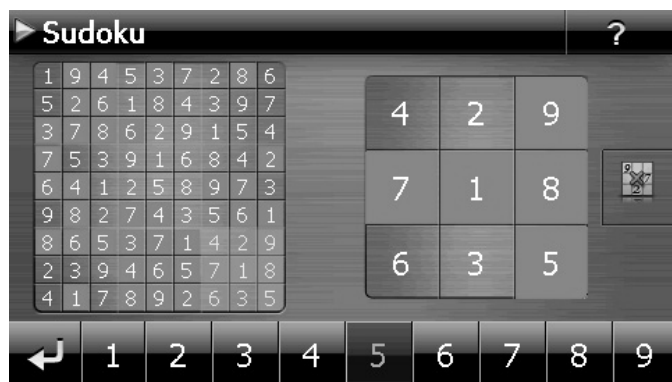
Overview of the game field



Description of the control buttons

Button	Description
	Strip of numbers to be entered Strip for the selection of the numbers to be entered in the number fields. The selected number will stand out and it will now be possible to enter it into a number field.
	Entry mode First, tap on the number in the strip of numbers to be entered that should appear in particular number field and then on the corresponding number field.
	Deletion mode Tap on the number to be deleted.
	Leave the application by means of this.

Traffic Rules Europe

You will receive a range of basic information about the traffic regulations of the respective country and its emergency numbers by means of the  Traffic rules Europe switch in the Extras menu.

Select the required country to have the information displayed to you (all information without liability).



FAQ



Where can I find more information on the navigation system?



Detailed operating instructions for navigation can be found on the corresponding CD/DVD, which accompany your navigation system.

Also use the additional Help functions that are available with a single touch of a button (usually F1 on the PC), or by selecting the Help option, as additional assistance. These aids will be provided to you while you are using the computer or the device.



What do I need the accompanied CD/DVD for?



The CD/DVD contains:

- the ActiveSync[®] program for balancing data between the navigation system and the PC.
- Additional programs (optional).
- This User manual in digital form.
- digital maps
- PC-application for rapidly resetting the data material
- Manual of the navigation software



The navigation system is no longer responding. What should I do?



Carry out a reset (see page 25).



How can I adjust the lighting?



Under Settings.

Customer Service

Faults and Possible Causes

The navigation system no longer reacts or is behaving atypically.

- Carry out a reset (see page 25).

The navigation system is recognised only as a guest by ActiveSync®.

- See information on page 76.

The GPS receiver cannot be initialised or found.

If a GPS signal continues not to be reported on the screen, in spite of the correct installation of the system, this can be caused by the following factors:

- Sufficient satellite reception is not possible.

Solution:

Change the position of your navigation system and ensure that unrestricted “sight” of the aerial is not impaired.

No language statements can be heard.

- Check the volume setting.

Additional Support

If the suggestions in the above section have not solved your problem, please contact our customer service hotline. However, before you contact your customer service hotline, please have the following information available:

- How is your navigation unit configured?
- What additional peripherals do you use?
- What messages, if any, appear on your screen?
- What software were you using when the error occurred?
- What steps have you already undertaken to solve the problem?
- If you have been given a customer number previously, please give this number to the technician.

Appendix

Special CleanUp Function


The CleanUp function serves the targeted deletion of data, without using a PC.

Note

Please use this function very carefully, because it is possible for data to be deleted that can only be entered again manually afterwards.

The CleanUp function is activated when the 'o' is pressed in the Gopal lettering of the Main Menu, immediately after the start tone following a reset.

The CleanUp function offers different options:

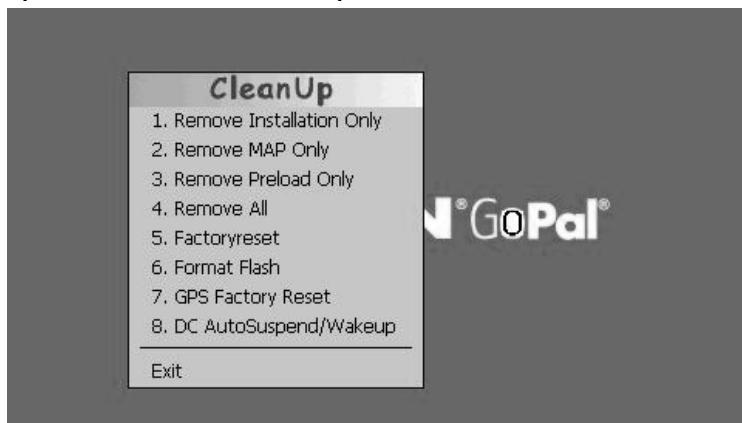

1. Remove Installation Only

Removes the software installed from the '**My Flash Disk**' memory [= part of the permanent memory in which the executable parts of the navigation software will be located following the initial alignment (\My Flash Disk\Navigation)].

2. Remove MAP Only

Removes the digital maps from the '**My Flash Disk**' memory (\My Flash Disk\MapRegions).

3. Remove Preload Only

Removes the data needed for the installation of the navigation software from the permanent memory (\My Flash Disk\Install).

4. Remove All

Deletes the whole contents of the '**My Flash Disk**' memory. It will not be necessary to recalibrate the screen after this function has been carried out.

5. Factoryreset

Sets the device back to the delivery status in the case of an intact main installation.

6. Format Flash

Formats the internal '**My Flash Disk**' memory. This formatting can be necessary in the case of a prolonged removal of errors. It will be necessary to recalibrate the screen after the formatting function has been carried out. All data will be deleted from the internal '**My Flash Disk**' memory irrevocably.

7. GPS Factory Reset

Performs a factory reset of the GPS receiver. When using the GPS function after having performed a factory reset, the GPS receiver must orientate itself again. This process may take a while.


8. DC AutoSuspend/Wakeup

You can select here when your navigation system should go into Standby mode automatically after the withdrawal of the external power supply. For example, this function is useful in the case of vehicles where the cigarette lighter also switches off when the ignition is switched off.

The AutoSuspend function will be activated several seconds after the discontinuation of the external power supply and the Standby display will appear for the time set (see Page 17).

The DC AutoSuspend function will be deactivated again if the power has been reconnected within the total period (in the case that the engine has been switched off for a short time, for example). Otherwise, the navigation system will go into the Standby mode after the expiry of the time set.

Set the required time by clicking on it and confirm your selection with **OK**.

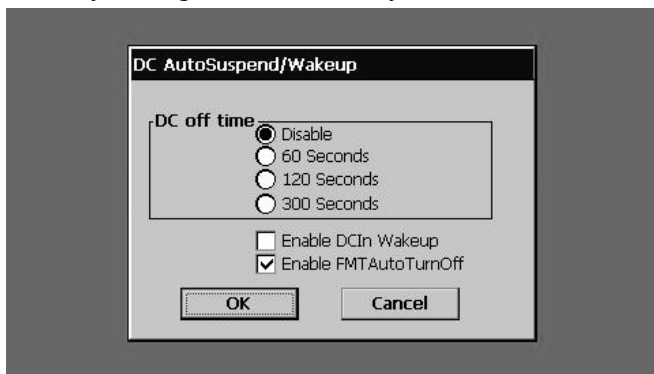

Note

This function is deactivated and can be set individually in the status at delivery and after a hard reset (see Page 25)

Exit

Leaving the CleanUp function and restarting the device (like reset).

Note

The deletion of the data must be confirmed before the action actually takes place. To do this, press on YES. There will be a corresponding report if the data to be deleted is no longer available.

Please read the “**Transferring Installation Files and Map Material to the Internal Memory**” chapter on Page 83, in order to recreate the files (installation files and map material) in the internal memory.

Synchronisation with the PC

I. Installing Microsoft® ActiveSync®

In order to transfer data between your PC and your navigation system you need the Microsoft® ActiveSync® program.

The cost of the navigation system includes a license for this program which can be found on the CD/DVD.

Hinweis

You will not need the ActiveSync® communications software, if you are a user of the Windows Vista® / Windows® 7 operating system. The system files necessary for the simple data transfer are already integrated into your operating system.

Attention!

Important files can be overwritten or changed during the installation of software. You should create a hard disk backup, in order to be able to have access to the original files in the case of possible problems following the installation.

You must have administrator rights to install the software under Windows® 2000 or XP.

Important

You should not connect the navigation system to your computer yet.

1. Insert the CD/DVD and wait until the program starts automatically.

Note

If it does not function, the Auto Run function is probably deactivated. The Setup program on the CD/DVD must be started, to start installation manually.


2. Choose the language, click then **Install ActiveSync®** and follow the instructions on the screen.

Note

When installing the GoPal Assistant, ActiveSync® will be installed automatically.

II. Connecting with the PC

1. Press the On/Off button to start your navigation system.
2. Connect the USB cable to your navigation system.
3. Push the USB connector into a free USB port on your computer.
4. The following screen will appear after the navigation system has been connected:

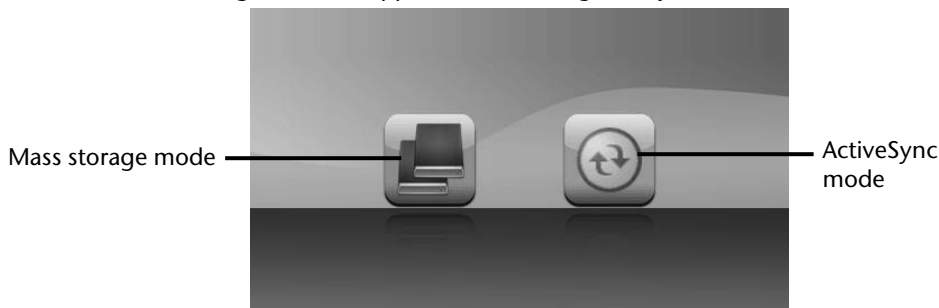

Note

The ActivSync® mode will be loaded automatically after a few seconds, if no mode has been selected.

5. Select the desired mode:

Mass Storage mode

You will be able to use your navigation device as a detachable device (e.g. a USB stick) in the Mass Storage mode. Two drives, the internal memory of the navigation system itself and the (optional) memory card, if it has been inserted into the device, will be connected to do this.

Note

No further entries can be made on the device at the same time if you are in this mode. Use the 'Remove hardware safely' function of your operating system to protect yourself against data loss. Now, remove the cable from your navigation system.

The Hardware Installation Assistant will now recognize a new device and will install a suitable driver. This can take several minutes.

ActiveSync®-Mode

Repeat the attempt to connect, if it has failed the first time, if you have selected the **ActiveSync® mode**.

Follow the instructions on your screen. The program will now set up a partnership between your PC and navigation system.

Note

The navigation system **must** have been recognized when setting up the ActiveSync® mode, in order to be able to work with the GoPal Assistant.

Alternative possibility of charging the battery

The battery will charge as soon as you connect your navigation device to a switched-on PC or notebook by means of a USB cable (optional). No type of software or driver installation will be necessary for this. Do not interrupt the charging process if possible during the initial charge.

III. Working with Microsoft® ActiveSync®

ActiveSync® will be started automatically if you connect your navigation system to the PC. The program will check whether the device is one with which a partnership has been entered. If this is the case, the changes that have taken place on the PC and on the navigation system since the last synchronisation will be compared and adjusted to each other. You will be able to define exactly which data will have priority during the synchronisation in the settings of the ActiveSync® Program. Call up the Help of the Program (with the F1 Button), in order to become familiar with the effects of the respective settings. A restricted **Guest Access**, with which you will be able to exchange data, for example, will become active automatically if the navigation system has not been recognised as a partner. If this is the case, although the process concerns the registered partner device, separate your navigation system from the PC and switch it off and on again. Now connect your navigation system to the PC, to restart the recognition process. Repeat the process and, restart your PC in addition, if your device continues to be recognised as a guest.

Note

Make sure that you always connect your navigation system to your PC with the same USB connection, otherwise your PC will allocate an additional ID and reinstall the device.

GPS (Global Positioning System)

GPS is a satellite-backed system for determining your position. With the help of 24 satellites revolving around the earth, it is possible to determine your position on earth with the accuracy of a few meters. The satellite signals are received by the antenna of the built-in GPS receiver, which must have a "line of sight" to at least 4 of these.

Note

When the line of sight is interrupted (e.g. in tunnels, between houses, in woods or also in vehicles with metal-coated windows) it is not possible to determine the position. The satellite reception however automatically picks up again as soon as the obstacle has been passed and the line of sight is re-established. Moving slowly (e.g. slow walking) also limits the accuracy of the navigation.

The GPS receiver consumes additional power. This is especially of concern when running on batteries. To conserve power do not turn on the GPS receiver unnecessarily. Also terminate the navigation software if it is not needed or satellite reception is not possible for a longer period. You can also switch the device off by means of the On/Off switch if you experience a short interruption in your journey, pressing the same switch again will reactivate a restart. The GPS receiver will also be reactivated at the same time, if the navigation software is still active. There may be a delay for the position to be updated again, this is dependent on the reception situation.

Note

Please note that your appliance is preset to not shut down automatically after a few minutes without activity. You can change this preset in the Settings mode. If the GPS receiver has not been active for some hours, it must orientate itself again. This process may take a while.

TMC (Traffic Message Channel) (optional)

The **Traffic Message Channel (TMC)** is a digital radio data service that functions in a similar way to RDS and is used to transmit disruptions to traffic to a suitable reception device.

The traffic information is continuously transmitted across FM.

The user is less dependent on the half-hourly broadcast traffic information, because the signal is continuously transmitted. Apart from this, important information, as in the case of an accident in the road ahead, can be passed on immediately.

The transmission is planned for the whole of Europe and is already offered by radio transmitters in many countries. The precision of the TMC messages can deviate greatly according to the country. At time of printing a TMC service is not available in Ireland.

The evaluation of TMC messages is not supported by every type of navigation software. Enquire whether your system supports TMC before the possible purchase of a TMC receiver.

In Austria, the TMC traffic messages are made available by the TMCplus service. TMCplus stands for an even faster and more efficient passing on of traffic messages. It is a co-operation between ASFINAG and the Hitradio Ö3 radio broadcaster.

Premium TMC (optional)

If your navigation system features premium TMC, you will obtain more accurate TMC information provided by NAVTEQ Traffic. Your MEDION GoPal utilizes this information at no extra cost. Depending on your configuration this premium TMC information is made available for the corresponding countries.

Standard TMC information is provided by police, automobile clubs and traffic reports, while premium TMC-services mainly rely on automatic traffic monitoring systems.

Sensors in highway bridges, sensing loops embedded in road surfaces and a large number of cars equipped with „Floating Car Data“ technology quickly generate precise and accurate views of the traffic situation on highways as well as predictions.

Your navigation system will support both services and is set for the reception of both of them in the status at delivery.


Connecting the TMC Dipole Aerial (optional)

A TMC receiver is integrated into your navigation system, to receive traffic information. However, reception will only be guaranteed if the TMC angled aerial supplied with the device has been connected.

A TMC aerial is integrated into your active holder, so that operation should be guaranteed in conurbations and strong transmission regions, even without an additional projecting aerial. This will depend on the area and the vehicle.

The connection of an external projecting aerial is recommended to improve reception, if no reception or only permanently insufficient reception is possible through the integrated aerial.

1. Plug the jack plug of the TMC angled aerial into the **earphones connection** of your navigation system.
2. Attach the aerial, on the edge or your windscreen, for example, with the help of the sucker.
3. Place the aerial so that a distance of approx. 10 cm from the metal frame of the screen is maintained.

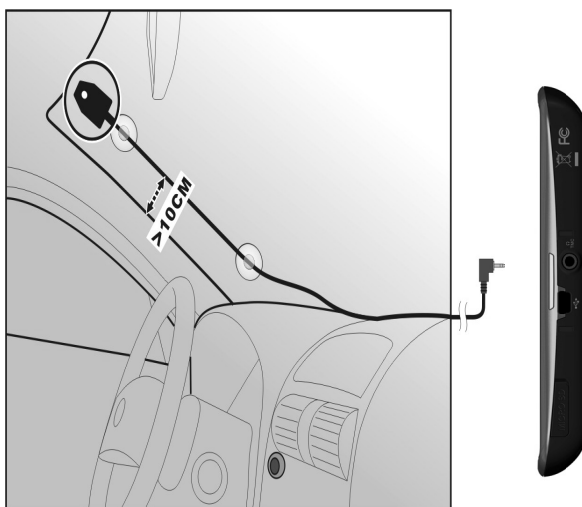

(similar pictures)

Your navigation system will now be able to receive traffic information through the TMC receiver and thus direct you away from disruptions to traffic.

Working with Memory Cards

Inserting Memory Cards

1. Carefully take the **optional** memory card out of its packing (if included). Take care not to touch or dirty the contacts.
2. Insert the memory card carefully into the card bay with contacts pointing forward. The card must lock easily.

Removing Memory Cards

Note

Only remove the memory card if the navigation software has been closed and the device has been switched off by means of the On/Off button beforehand. Otherwise you will risk a loss of data.

1. To remove the card press lightly onto the upper edge until it ejects.
2. Pull the card out without touching the contacts.
3. Store the memory card in the packaging or in another safe location.

Note

Memory cards are very fragile. Take care not to dirty the contacts and not to force the card.

Accessing Memory Cards

- The appliance only supports memory cards in the FAT16/32 file format. If you insert a card prepared with a different format (e.g. in cameras, MP3 players), your navigation system may not recognise it and will ask you to format it again.

Attention!

Formatting the memory card irretrievably wipes out all data.

Data Exchange via Card Reader

If you wish to copy large quantities of data (MP3 files, navigation maps) to the memory card, these can also be stored directly to the memory card.

Many computers already have memory card devices. Insert the card into your computer and copy the data directly to the card.

Because of the direct access you can achieve a much higher transfer rate compared to using ActiveSync®.

Additional Card Material

Your navigation system is already equipped with digitalised map material in the internal memory and/or memory card at the factory. Depending on the configuration, additional maps may be included on your navigation CD/DVD. You will be able to transfer these cards to a memory card immediately. It is recommended that you use an external card reader (see also page 82). The GoPal Assistant supplied with the device enables a simple and individual compilation of the map material to be transferred.

Depending on the amount of map data on the navigation CD/DVD, memory cards with capacities of 256 MB, 512 MB, 1.024 MB or more may be required.

You can obtain additional memory cards in specialist stores.

Transfer of card material to a memory card

The transfer of additional card material to a memory card can take place through Explorer on your PC via the following steps:

1. Insert the CD/DVD with the card material required.
2. Start your workstation and select your CD/DVD Drive.
3. Copy the file with the **.psf** ending out of the Directory of the region that you require to the **MapRegions** Directory on your memory card, from the CD/DVD.

You can transfer several files with map material to your memory card, depending on the capacity of the memory card.

If you have copied digitized maps of several countries or country groups onto your memory card, you will be required to select the desired map in the navigation application of your device.

Alternate method of installing Navigation Software (using a memory card)

The software for your navigation system can be installed directly from a memory card.

The pre-installed software may have to be uninstalled beforehand (see special Clean Up function, Page 72).

You will be requested to install the navigation software during the initial adjustment.

Please proceed as follows:

1. Remove the memory card from the packaging carefully. Ensure the contacts are not touched or soiled.
2. Push the memory card into the corresponding slot until it engages.
3. Click on **OK**, in order to install the application.

The main screen, through which you will now be able to carry out the navigation settings, will appear after all data has been copied to your navigation system.

Transferring Installation Files and Map Material to the Internal Memory

Note

The navigation system must be connected to a computer by means of ActiveSync® for the transfer of the data.

Your device has an internal, permanent memory, which is located in the **\My Flash Disk** directory.

You will be able to make this directory, and others, visible with ActiveSync®, by means of the **Search** option. Directories and files can be manipulated as in Windows Explorer.

The required directory must have been stored, in order to make the installation files and the map material for the device available.

Deposit the **INSTALL** directory for the installation files at (**\My Flash Disk\INSTALL**). Deposit the map material in the **MapRegions** directory (**\My Flash Disk\MapRegions**). Please pay attention to the modes of lettering given above when naming the directories.

Pay attention to the fact that sufficient drive capacity must be available, if you have stored additional data on your navigation device. Remove files not needed if sufficient drive capacity is not available.

Specifications

Parameter	Information	
Power supply Power supply cable for a cigarette lighter	CA-051-00U-00 / CA-0511MH-2F (Mitac)	
	Input	12-24V DC, 800mA / Sicherung 2A (T2AL/250V)
	Output	5V / 1A (max.)
Battery	Li-Ion, 3.7 V	
Earphones	Stereo earphones (3.5 mm)	
Memory card type	Micro-SD	
Bluetooth (optional)	Class 2	
FM transmitter (optional)	87.5 – 108 MHz	
USB interface	USB 2.0	
Dimensions	approx. 138 mm x 90 mm x 18 mm	
Weight incl. battery	approx. 185 g (without packaging)	
Temperatures	Operating	+41 °F – +95° F (+5° C - +35° C)
	Storage	+32 °F – +140 °F -0° C - +60° C
Humidity (without condensation)	10 – 90 %	

Model Overview

Model	Microphone	Bluetooth	TMC via integrated TMC receiver and TMC dipole antenna
P5255	●	○	●
P5455	●	●	●

● = Equipment available

○ = Equipment not available

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Shielded interface cables, if any, must be used in order to comply with the emission limits.

Index

A

Accessing Memory cards	81
ActiveSync®-Mode	77
Additional card material.....	82
Aerial Orientation	29
AlarmClock (Wake up function)	
Ending the application.....	62
Selecting an alarm signal	60
Setting the system time	59
Setting the volume	61
Snooze function.....	62
Interfaces	58
Main screen	57
Alternative installation of the navigation software from a memory card	83
Ambient temperature	2
Attaching the Navigation System	30
Auto run	75
Auto start.....	75

B

Battery Charge Indicator	8
Battery Operation	4
Bluetooth	
Accepting incoming calls	46
Main screen	43
Making calls.....	46
Pairing	45
Starting the application	43
Bluetooth indicator.....	8

C

Cabling.....	3
Card reader.....	82
Care of the Display	5
CleanUp	18, 72
Contact Manager	
Bedienung	64
Create database	63
Main Screen.....	64
Storing Contacts.....	64
Customer Service.....	71

D

Data exchange	82
Data Security.....	1
DC AutoSuspend	73

E

Earphones	10
Electromagnetic Compatibility	3
EMC	3

F

FAQ.....	70
FCC Compliance Statement	86
Fingerprint sensor	9

G

GPS	78
-----------	----

H

Hard Reset.....	26
Hotline	71

I

Initial set up	
Charging the battery	11
Power supply	12
Switching on the device	13

L

Loudspeaker	9
-------------------	---

M

Mass Storage mode.....	76
Memory card insertion slot	10
Memory cards	81
Microsoft® ActiveSync®	75
Mini-USB-Connector	10
Model Overview	85
Mounting the car holder	29
MP3 Player.....	49
List of favourites	51
Bookmarks	51

N		
Navigation		
Mounting the car holder	29	
Safety instructions	27	
Starting the navigation software	32	
O		
On-/ Off button	9	
Operating		
Switching on/off the device	17	
Operating Environment	2	
P		
Password	18	
Picture Viewer		
Main screen	52	
Operation	52	
R		
R&TTE	4	
Recycling and Disposal	5	
Repair	2	
Reset	25	
Resetting the navigation system		
Hard Reset	25	
Soft Reset	25	
S		
Safety and Maintenance	1	
Safety instructions		
Navigation	27	
Safety Instructions		
Connection	3	
Ambient temperature	2	
Data security	1	
Operating environment	2	
Repair	2	
Cabling	3	
Battery operation	4	
Maintenance	4	
Care of the display	5	
Transport	6	
Security	18	
Service		
Faults and possible causes	71	
Hotline	71	
Specifications	84	
Speech commands	38	
Standards		
FCC Compliance Statement	86	
R&TTE	4	
Starting the navigation software	32	
Sudoku		
Description of the switch fields	68	
Main screen	66	
SuperPIN	20, 23	
Supplied Items	7	
Synchronisation with the PC	75	
T		
TMC	79	
Connecting TMC Dipole Aerial	80	
Touch Screen	8	
Transfer of card material to a		
memory card	82	
Transferring Installation Files and		
Map Material to the Internal		
Memory	83	
Transport	6	
Travel Guide	55	
U		
UUID	20, 23	
V		
Views		
Back components	9	
Bottom components	10	
Front components	8	
Top components	9	
W		
Warning function for traffic		
monitoring points	33	

Medion Electronics Ltd.
120 Faraday Park, Faraday Road, Dorcan
Swindon SN3 5JF, Wiltshire

Hotline: 0871 - 376 10 20
(Costs 7p/min from a BT landline,
mobile costs maybe higher)

FAX: 01793 - 715 716

www.medion.co.uk

Medion AG, 45307 Essen, Germany

40039149